Contents

The following items are included within your fixed frame screen box.


Verify all items are present and prepare a clean working area to begin assembly

Part	Description	Quantity
#1	Frame (Long Bar)	2
#2	Frame (Short Bar)	2
#3	Elbow Connectors	4
#4	M5*20 Screw And Washer	16
#5	Screen Fabric	1
#6	Hanging Plate	2
#7	M6*22 Screw	6
#8	Bulage Screw	2
		_

Professional Cinema Fixed Frame Screen




User and Set-Up Guide

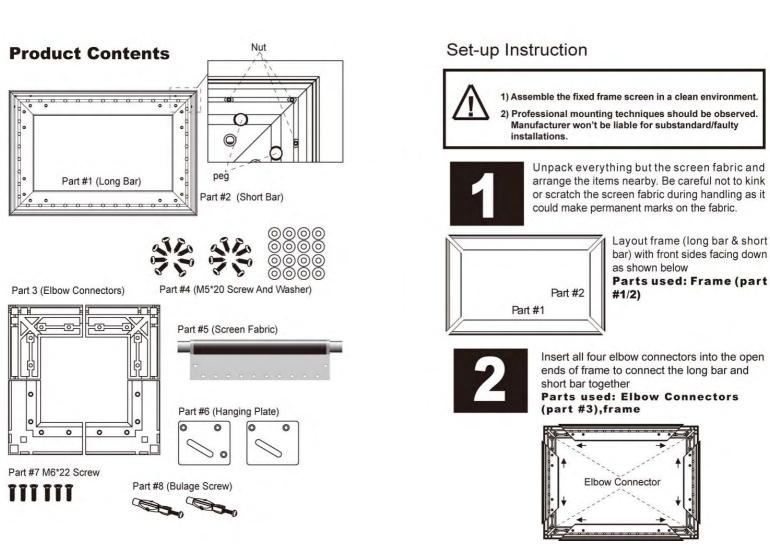




With the four sides of the frame connected, insert four M5*20 screws to each corner of the screen as allowed Parts used: M5*20 Screws (part #4), Elbow Connectors, Frame

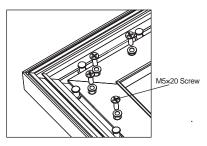

4

Unroll screen fabric carefully with viewing side down, on a clean surface to avoid scratching the fabric.


Parts used: Screen Fabric (part #5)

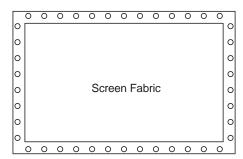



Install screen hangers on to the top corners of the frame. Using M6*22 screw.

 Parts used: Hanging Plate (part #6),M6*22 Screw (part #7) Bulage Screw (part #8)






M5×50 Screw




The screen is ready for hanging onto the desired wall.

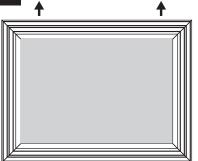




Complete two sides of screen by putting eyelet of fabric into pegs on the frame

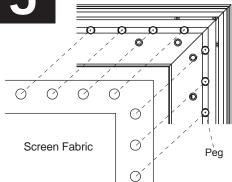



continue to complete the third and four sides of frame the far side to the joint edge with proper pulling strengh to the ending edge.

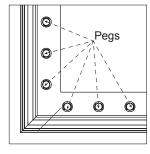

Product Care

- 1) Avoid getting any material on the screen. It may create scratches on the screen permanently.
- 2) Soft brushes with gentle serokes can only be used to remove dust on the screen.
- 3) Use a soft brush to clean the velvet frame and/or back-side of the screen.
- 4) Keep screen away from excessive heat.